





Optional Blower Kit Installation Instructions WODC.BLOW

- Contents:**
- 1 x Blower Assembly
 - 2 x #8x1/2 screws
 - 1 x Temperature snap-switch assembly (switch and bracket)

Blower Assembly Installation (all models):

1. Loosen the 2 screws at the center of the blower.
2. Install the temperature snap-switch assembly onto the blower by placing the bracket over the screws.
3. Tighten the screws.

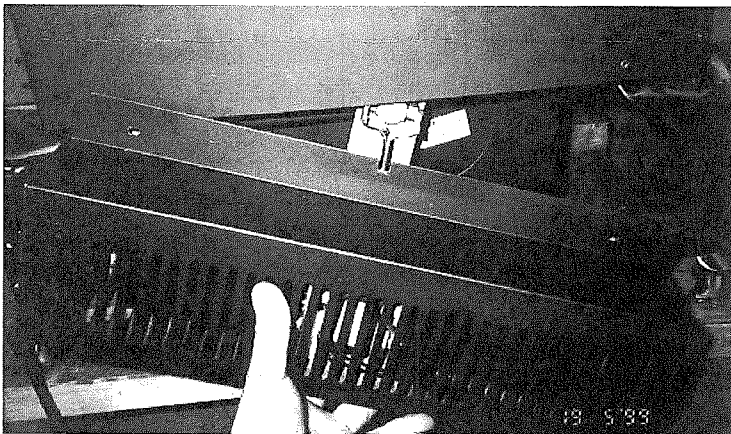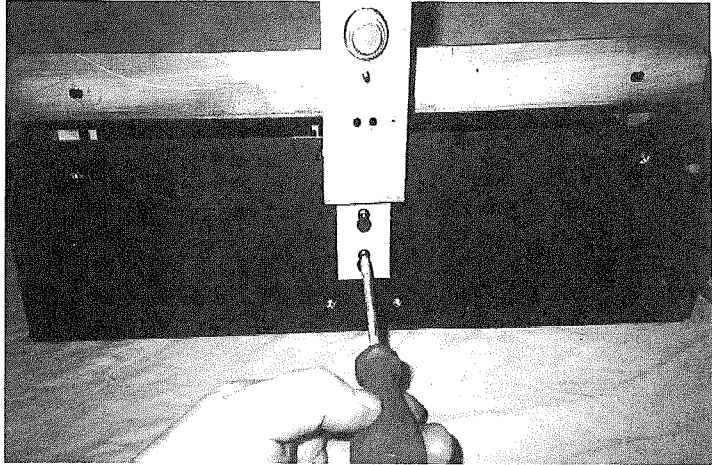

4. Ensure that the two wires are connected to the temperature snap-switch.
5. Slide the temperature snap-switch assembly up into the space between the rear shield and the firebox, ensuring that the temperature snap-switch contacts the firebox.

6. Install the two screws through the flange of the blower into the rear shield.
7. Plug the power supply cord in and check blower operation.

